

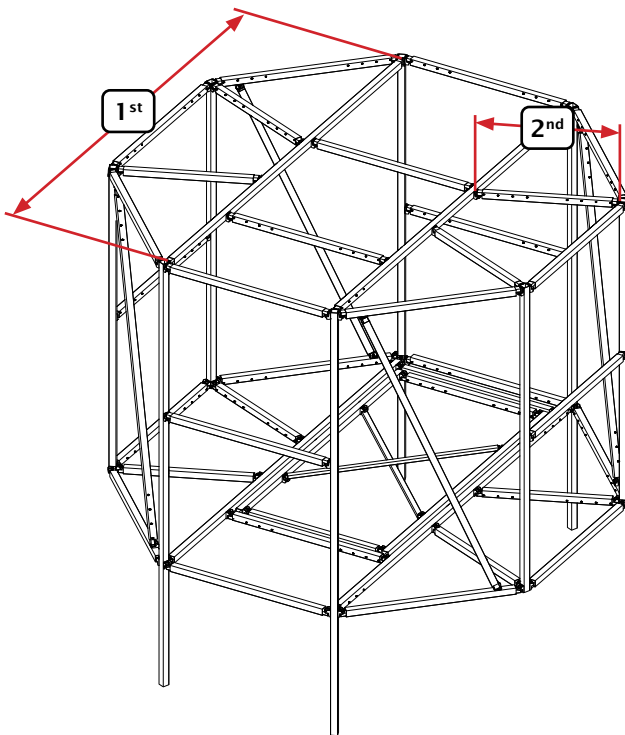


EASY FRAME POD

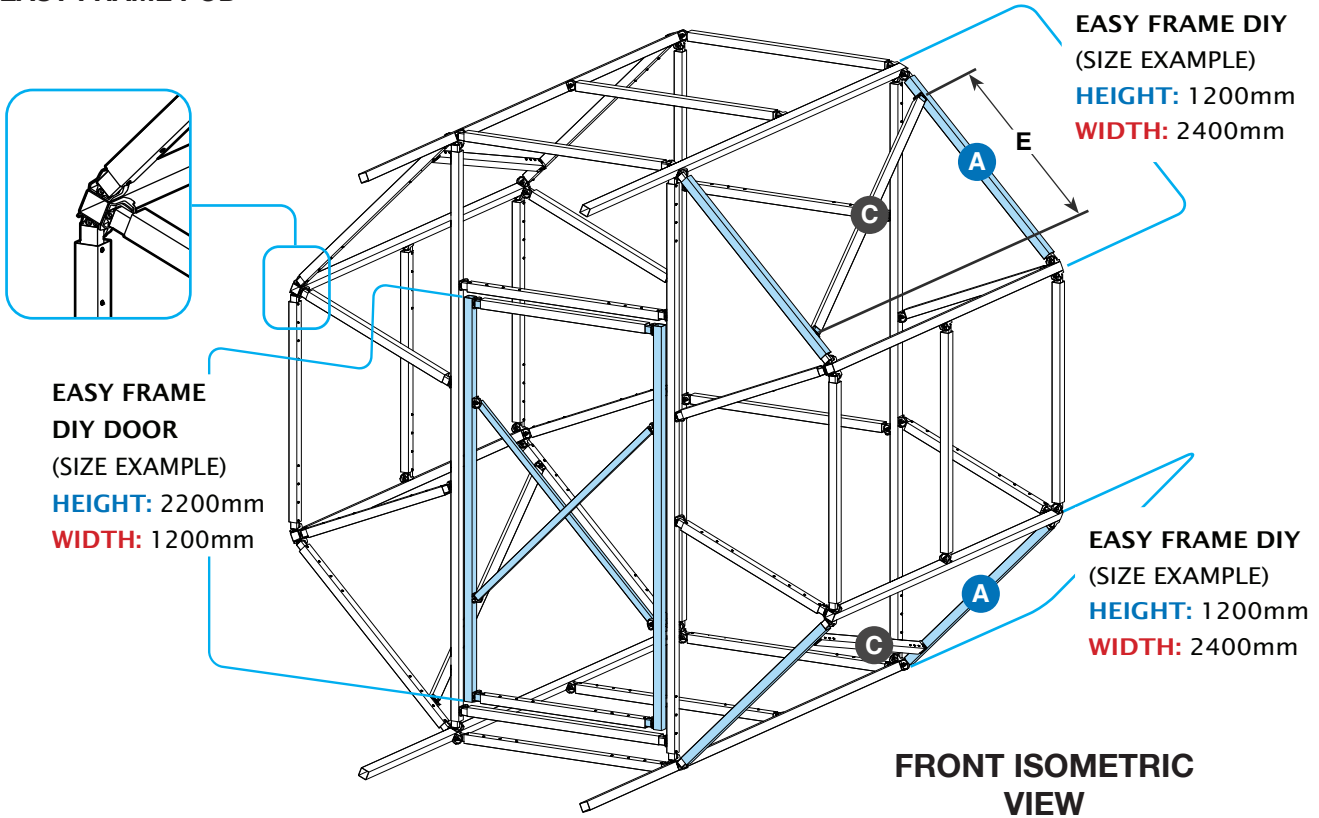

STEP 1: Build perimeter first on end and then determine inside member lengths

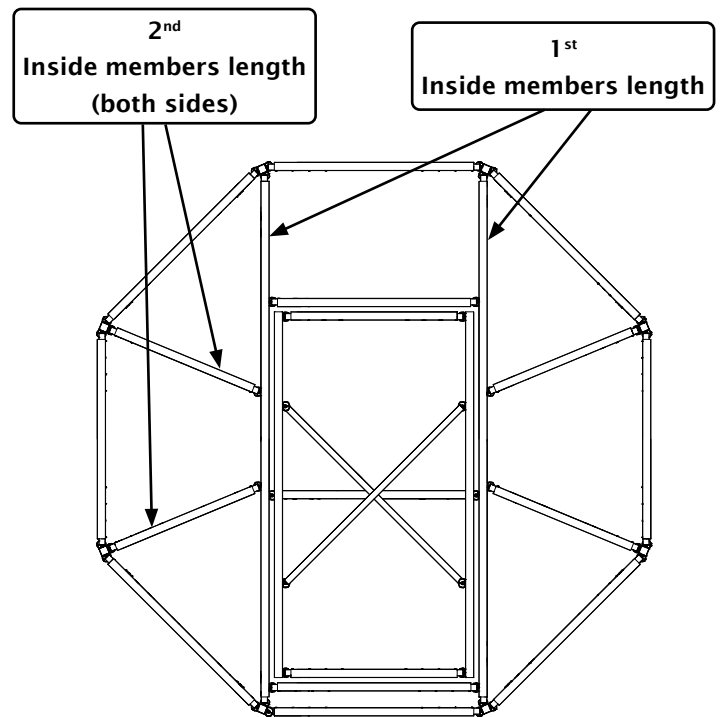

STEP 2: Only turn over the Pod once all inside members are installed

Ensure Brace lengths and Universal Connector placements are the same both sides for a symmetrical build.