



EASY FRAME WINDOW AWNING

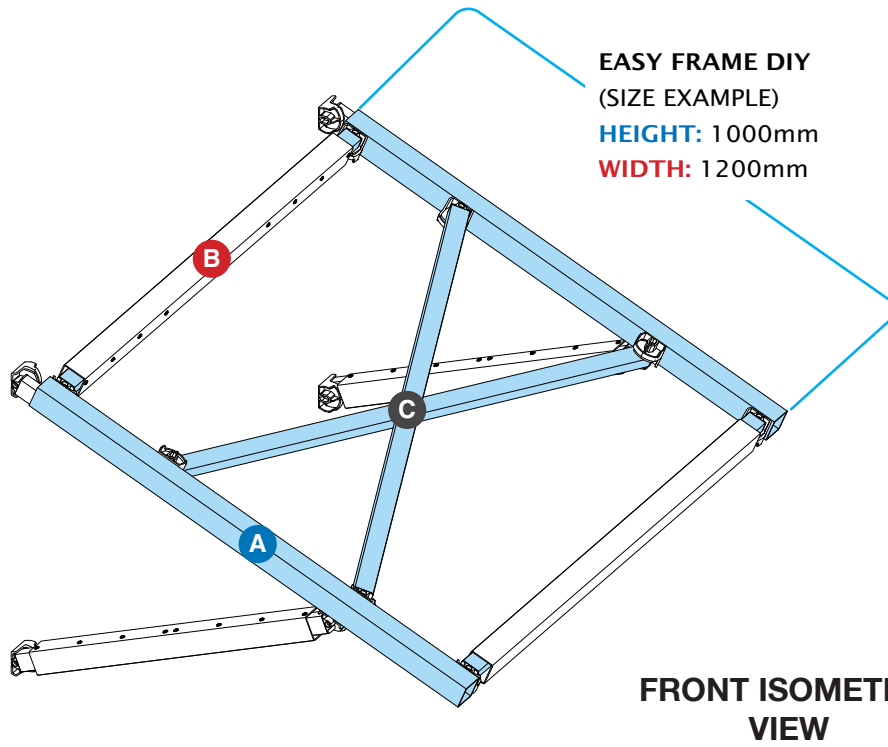


EASY FRAME DIY
(SIZE EXAMPLE)
HEIGHT: 1000mm
WIDTH: 1200mm

FRONT ISOMETRIC
VIEW

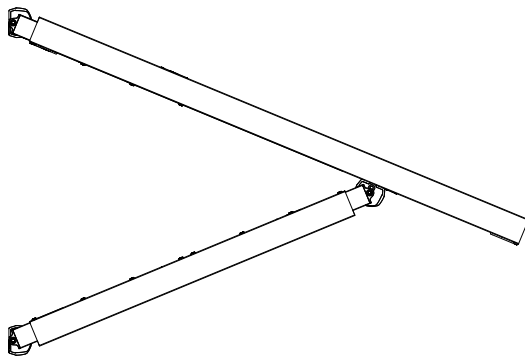

Determine brace lengths and
Universal Connector placement
from connection angles.

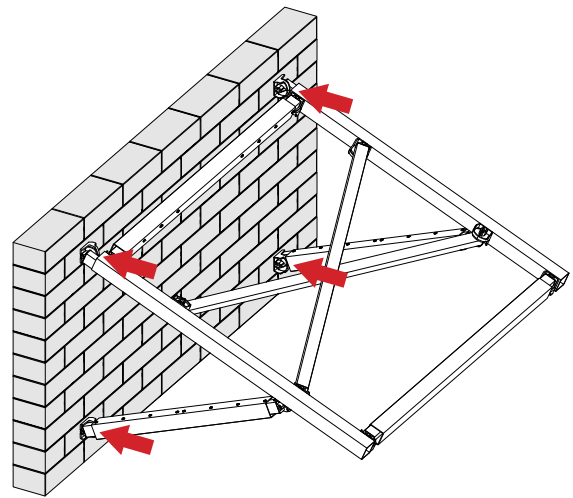

Fix to any surface using screws
best suited for the surface.

Ensure Brace lengths and Universal Connector placements
are the same both sides for a symmetrical build.