



EASY FRAME DIY Kit

Includes:

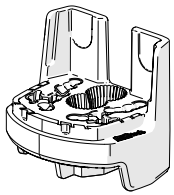

Kwiktech
Universal
Connector
(KT-P-002)
x8

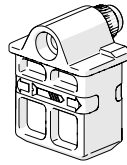


Kwiktech
Standard
Rail Insert
(KT-P-003)
x8



Right Angle
Bracket
x1




10g x 16 Self
Drilling Wafer
Head Screw
x50




Socket Head
Cap Screw
x8

Metal Tube Required


Either Aluminium or DuraGal

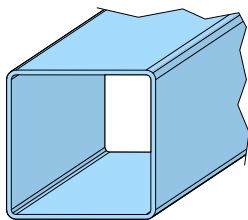

50x50mm SHS
(1.5-2.5mm THK)

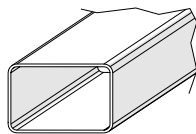


25x38 mm RHS
(1.2-1.6mm THK)

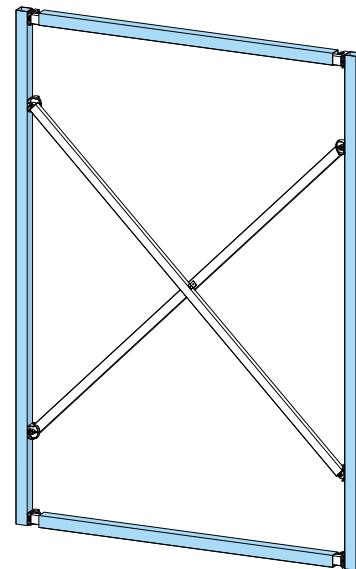

*Example built from this kit

Tools Required

9351815000237

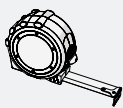

Tape
Measure




Marker



Power Drill or
Impact Driver



No 2.
Phillips
Head Bit

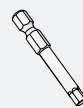

Hex 5 Bit
and/or
Allen Key



Safety
Glasses



Metal Cutting
Tool for DIY
Cutting

Additional safety, clamping and access equipment may be required at the users discretion. Ø3.5mm drill bit required for some frame work concepts.