


EASY FRAME ANY SIZE DIAGONAL BRACING OPTION

1. Square the frame or frame section

Ensure dimensions 1 & 2 are the same length

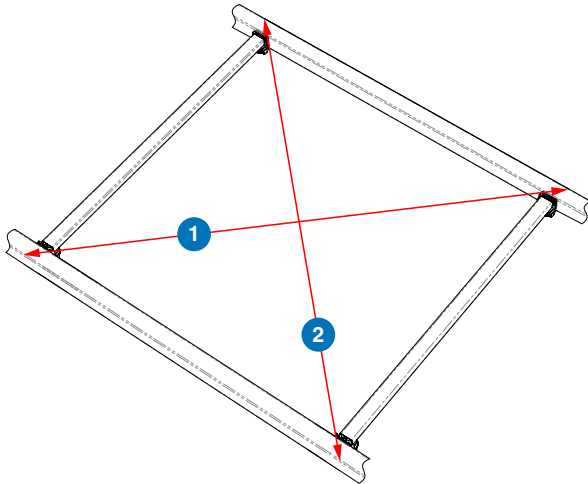


2. Mark out Coupling positions

Set the desired angle on both couplings, place in position then eyeball it until they line up




Hint; Use a straight edge

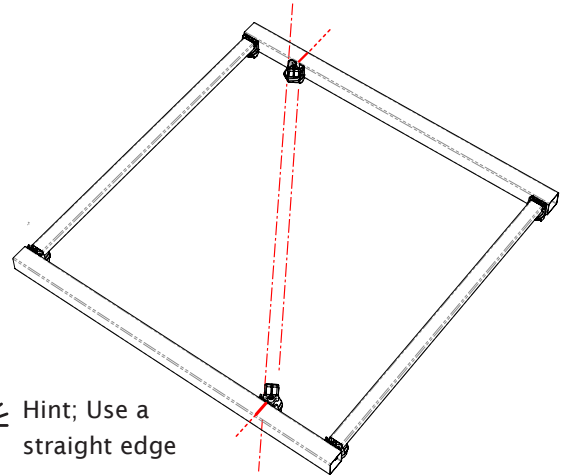


3. Fix the Universal Connector

4 Screws each

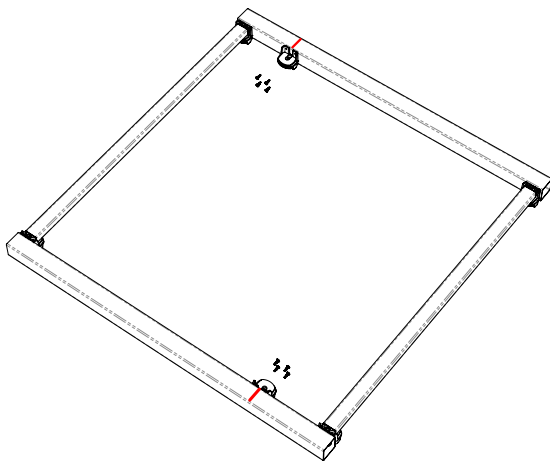


4. Double check the frame is square!

Note; The frame can move during the previous steps

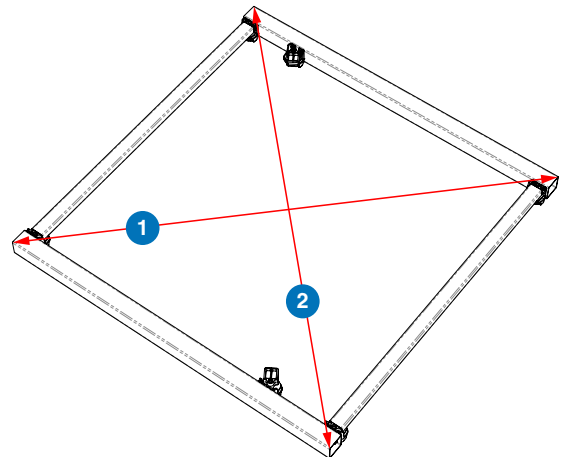

5. Measure the distance

Measure between the Rail Insert shoulders, then cut rail to this dimension.

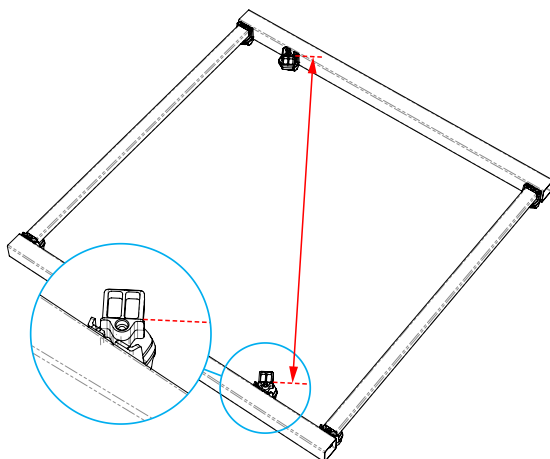

6. Install the brace

Assemble 2 Rail Inserts into the rail, then install the assembly to the frame to lock it square

